

# Tan & Blue to i-Guide™ Conversion Chart

intuitive. intelligent. inspiring. i-Guide. That's the power of i.

The information below gives you an overview of the key areas of difference between your current guide and the all new i-Guide. These instructions will help you and your customers become familiar with what is different and how to access each feature.

Feature	Tan Guide	Blue Guide	i-Guide™
<b>Main Menu &amp; Quick Menu</b>	 <p>Press Menu for <b>Main Menu</b></p> <p>No Quick Menu Available</p>	 <p>Press Menu for <b>Main Menu</b></p>  <p>Or press Guide for <b>Listings by Time</b> with action icons at the bottom of screen</p>	 <p>Press Menu for <b>Quick Menu</b></p>  <p>Press Menu twice for <b>Main Menu</b></p>
<b>Main Menu &amp; Quick Menu – Nav Shell Markets</b>	 <p>Press Menu</p>  <p>Select TV Guide option from the <b>Nav Shell</b> to get to <b>Main Menu</b></p>	 <p>Press Menu</p>  <p>Select the TV Guide option from the <b>Nav Shell</b> to get to <b>Main Menu</b></p>	 <p>Press Menu for <b>Quick Menu</b></p>  <p>Press Menu twice for <b>Main Menu</b></p>
<b>TV Listings</b>	 <p>Press Guide for <b>Listings By Time</b></p> <p>See listings for <b>current ½ hour</b></p> <p><i>If Nav Shell is available:</i></p> <ul style="list-style-type: none"> <li>- Press Menu for <b>Nav Shell</b>, select <b>Main Menu</b>, select <b>Listings By Time</b></li> </ul>	 <p>Press Guide for <b>Listings by Time</b></p> <p>See listings for <b>current hour</b></p> <p><i>If Nav Shell is available:</i></p> <ul style="list-style-type: none"> <li>- Press Menu for <b>Nav Shell</b>, select <b>Main Menu</b>, select <b>Listings By Time</b></li> </ul>	 <p>Press Guide for <b>Listings by Time</b>. See listings for <b>1½ hrs</b></p>  <p>Press OK or up/down arrow while watching TV for <b>Mini Guide</b></p>

**Search**




From the **Main Menu**



Select the category options for Movies, Sports or Children



Or go directly to Search from the Main Menu to search alphabetically

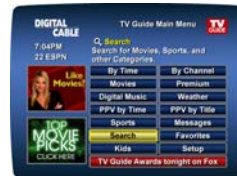


From the **Main Menu**



Or from the **Quick Access Menu** – select categories or Search



From the **Search Menu** (accessed from Main Menu or Quick Menu) Subcategories appear for Movies, Sports, Children, etc.

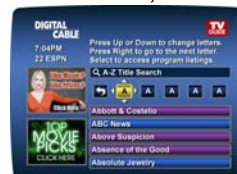


Or you can search alphabetically by title



Select the **Search Icon** from the **Quick Menu**



Or select **Search** from the **Main Menu**

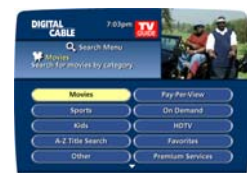

Searches are available in many specific categories



Select by type



And then select the title



Or you can search alphabetically by title

**Program Information**



Press **INFO** while watching TV



Press **INFO** from listings



Or select a programming panel ad



Press **INFO** while watching TV



See **Instant Info** at the top of the screen from TV Listings screens as you highlight a program




Press **INFO** while in a Listings screen



Press **INFO** while watching TV for mini-info



Or press **INFO** twice for a full information screen

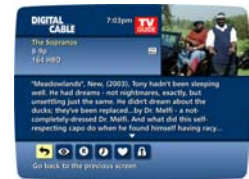

Press **INFO** while in a Listings screen

**Set Reminders**

**Order PPV or On Demand**

**Set Locks**

**See other air times for program**

**See video previews (if available)**



**Remind**



**Order**



**Locks**

From Program Information. Use the R/L arrows and OK/SEL buttons to navigate and select options.



From Program Information, these options are available from the **Action Icons**. All icons are visible on one screen. Use the R/L arrows and OK/SEL buttons to navigate and select. The information displayed above the icons describes the icon you have highlighted.

Indicators appear next to program titles when you set these options.

For example: A **Reminder** is set in the example above.



From Program Info Screens, Use the R/L arrows and OK/SEL buttons to navigate the **Action Icons** and select. The information below the icons describes the highlighted icon.

Indicators appear next to program titles when you set these options.




Watch or buy this program




Or set Parental Locks

## Parental Control/Locks

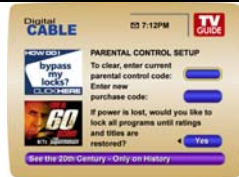

### Set Up Parental Control Codes:

From **Main Menu**, select Setup, then select Parental Control. Enter and change your 4-digit code.

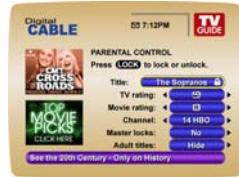

### Place Locks:

From **Main Menu**, select Parents (Locks in some markets). Press LOCK to set Locks by rating or channel.

Press **LOCK** on remote anytime while watching TV or while in the guide to restrict viewing by title, rating or channel.




### Set Up Locks PINs:

From **Main Menu**, select Setup, then select Pins Setup. Enter or change your 4-digit code.



### Place Locks:

From **Main Menu**, select Setup, then select Locks. Press OK or LOCK to lock and unlock by title, ratings or channel.

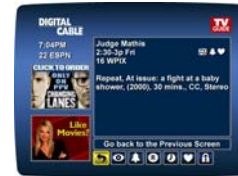


Select the **LOCK Action Icon** from Program Information.

Press **LOCK** on remote anytime while watching TV or while in the guide to restrict viewing by title, rating or channel.



### Set Up Locks PINs:

From **Main Menu**, select Setup, then select Pins Setup. Enter or change your 4-digit code.

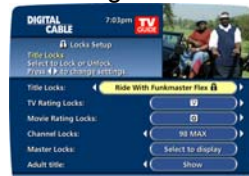

### Place Locks:

From **Main Menu**, select Setup, then select **Locks Setup**. Press OK or LOCK to lock.



Select the **LOCK Action Icon** from Program Information.

Press **LOCK** on remote anytime while watching TV or while in the guide to restrict viewing by title, rating or channel.

## Favorites

### To Set Favorites:



From **Main Menu**, select **Favorites**. Highlight a channel in the list and press FAV on your remote to set the channel as a Favorite.

### To Set Favorites:



From Program Information, select the **Favorites** (heart) icon on the **Toolbar** to set the channel as a Favorite.

### To Set Favorites:



From Program Information, select the **Favorites** (heart) Action Icon, to set the channel as a Favorite.

**Favorites Cont'd**

**To Access Favorites:**



Press **F** on your remote while watching TV or while in listings to advance to the next favorite channel

**To Access Favorites:**



From **Main Menu**, or from the **Toolbar**, select the Favorites Icon, to see a *custom list of only your favorite channels*



Press **F** on your remote while watching TV or while in listings to advance to the next favorite channel

**To Access Favorites:**



From **Quick Menu** or **Main Menu**,

Select the Favorites Icon, to see a *custom list of only your favorite channels*.



Press **F** on your remote while watching TV or while in listings to advance to the next favorite channel.


**VOD**



From **Main Menu**, select **VOD**  
From **VOD Main Menu** select the desired category



Select the title and Press **OK**.  
A purchase overlay will appear depending on if title is free or has a cost

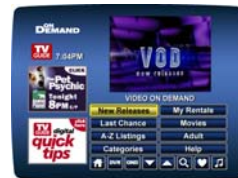

From **Main Menu** or from the **OND** icon in the toolbar, select **VOD**  
From **VOD Main Menu** select the desired category.



Select the title and press **OK**.  
A purchase overlay will appear depending on if title is free or has a cost



You can also access VOD by pressing **Guide** and selecting a VOD channel from the lineup



**Quick Menu -**



**Main Menu -**



**Flip Bar -**



Virtual Channel in the listings-


From **Quick Menu** or **Main Menu**, select **On Demand**

VOD Cont'd



You can also access VOD by pressing **Guide** and selecting a VOD channel from the lineup.

If Nav Shell is available:

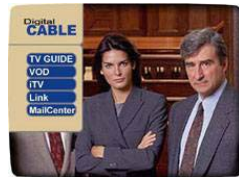

Press Menu for the **Nav Shell**; then select VOD Or select **TV Guide**, then select VOD.

Playback Controls:  
Pause, rewind, fast forward and instant replay any On Demand title with the On Demand playback controls

If Nav Shell is available:




Press Menu for the **Nav Shell**; Select VOD Or select **TV Guide**, then select **VOD**.



Pause, rewind, fast forward, and instant replay any On Demand title with the On Demand playback controls.



From **VOD Main Menu** select the desired category

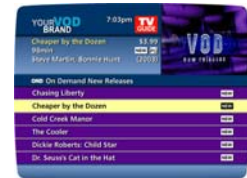

Select the title and press OK A purchase overlay will appear depending on if title is free or has a cost.



Pause, rewind, fast forward, and instant replay any On Demand title with the On Demand status bar. The Status Bar also lets you know where you are in the program.

DVR

Not available

Pause, rewind, fast forward, and instant replay with DVR. Three Ways to Record:




One Touch Record – Press the record button While watching TV or in any listings screen.



One Touch Record – Press the record button While watching TV or in any listings screen.

DVR Cont'd

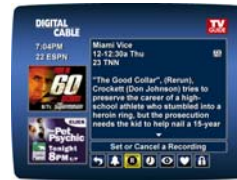

From a Program Information screen –  
Select the record icon



From a Program Information screen –  
Select the Record Icon



From the **Main Menu**, select **DVR** to access the **DVR Main Menu**, select **Set a Recording**, to manually schedule a recording



From the **Main Menu** or **Quick Menu**, select **DVR** to access the **DVR Main Menu** Select **Set a Recording**, to manually schedule a recording



Select the start time, end time, day and channel to record



Select the start, end time, day and channel to record.

Access Your DVR Library:



From the Main Menu, select **DVR**, then **My Recordings**, **Set a Recording** or **Future Recordings**

Access Your DVR Library:



From the Main Menu, select **DVR**, then **My Recordings**, **Set a Recording** or **Future Recordings**